




INSTRUKCJA OBSŁUGI

ELEKTRYCZNY GRZEJNIK KOMINKOWY SERII TF-EF

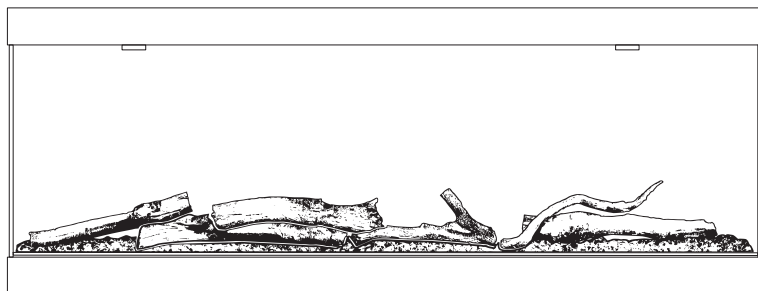

Model: TF-EF-1324-36, TF-EF-1324-50, TF-EF-1324-72



PL

Instrukcja montażu

ENG

Installation manual



Uwaga: Przed rozpoczęciem instalacji przeczytaj instrukcję!
Note: Please read the instructions before starting the installation!



Przeczytaj ze zrozumieniem całą instrukcję obsługi. Zapoznaj się z informacjami dotyczącymi bezpieczeństwa, przed podłączeniem i użyciem tego produktu. Niezastosowanie się do tego zalecenia może spowodować pożar, porażenie prądem elektrycznym lub poważne obrażenia ciała.



Zachowaj niniejszą instrukcję obsługi na przyszłość. Jeśli sprzedajesz lub oddajesz ten produkt, upewnij się, że niniejsza instrukcja jest do niego dołączona.

Spis treści

WAŻNE INFORMACJE	03
Rysunki wymiarowe	05
Wymiary ramy	05
Parametry elektryczne.....	05
Wymagane narzędzia.	06
ZAWARTOŚĆ OPAKOWANIA	06
Pomocne porady przed montażem	07
Instalacja	07
Montaż we wnęce.....	07
Montaż na ścianie.....	08
Obsługa panelu sterowania i pilota zdalnego sterowania.....	09
Połączenie przez WIFI.....	11
Działanie kominka.....	14
Czyszczenie.....	14
OSTRZEŻENIA.....	14
Specyfikacja techniczna.....	14
Wyłącznik bezpieczeństwa.....	15
Rozwiązywanie problemów.....	15
KARTA GWARANCYJNA.....	16

WAŻNE INFORMACJE DOTYCZĄCE BEZPIECZEŃSTWA

- Urządzenie wyposażone jest w grzałkę i może być gorące podczas pracy i może spowodować poważne oparzenia w przypadku kontaktu.
- Przed użyciem urządzenia uważnie przeczytaj instrukcję obsługi. Niezastosowanie się do instrukcji obsługi może spowodować pożar lub obrażenia ciała.
- Nie wolno instalować uszkodzonych, niekompletnych lub zamiennych komponentów.
- W urządzeniu nie wolno spalać drewna ani innych materiałów.
- Wszystkie urządzenia elektryczne mają wewnątrz gorące i wyładowujące się łukowo lub iskrzące części. Nie używaj urządzenia w miejscach, w których znajdują się przewody gazowe, farby lub łatwopalne ciecze.
- Przed przystąpieniem do obsługi urządzenia należy zdemontować osłonę zabezpieczającą.
- Konieczne jest utrzymywanie w czystości panelu sterowania. Urządzenie powinno być sprawdzane przed użyciem i co najmniej raz w roku przez wykwalifikowanego pracownika serwisu. Częstsze czyszczenie może być wymagane z powodu nadmiernej ilości kłacek z dywanów, pościeli itp. Obszar wokół urządzenia musi być czysty i wolny od materiałów łatwopalnych, benzyny i innych łatwopalnych oparów i cieczy.
- W żadnym wypadku nie należy modyfikować tego urządzenia.
- Nie używaj urządzenia, jeśli jakkolwiek jego część znalazła się pod wodą. Należy niezwłocznie wezwać wykwalifikowanego technika w celu sprawdzenia urządzenia i wymiany jakiegokolwiek części systemu sterowania, która znalazła się pod wodą.
- Jeśli urządzenie jest wyposażone w szklane drzwiczki, nie wolno używać go ze zdjętymi, pękniętymi lub stłuczonymi szklanymi drzwiczkami. Wymiana szyby powinna być wykonana przez licencjonowanego lub wykwalifikowanego serwisanta. Nie wolno uderzać ani zatrzaskiwać szklanych drzwiczek urządzenia.
- Opakowanie należy przechowywać w miejscu niedostępnym dla dzieci i utylizować w bezpieczny sposób. Podobnie jak wszystkie torby plastikowe, nie są to zabawki i powinny być trzymane z dala od dzieci i niemowląt.
- Czynności serwisowe powinny być wykonywane tylko wtedy, gdy urządzenie jest odłączone od obwodu zasilania.
- Zawsze odłączaj urządzenie, gdy nie jest używane.
- Nie używaj tego urządzenia z uszkodzonym przewodem lub wtyczką. Jeśli urządzenie działa nieprawidłowo, zostało upuszczone lub uszkodzone w jakikolwiek sposób, należy oddać je do autoryzowanego serwisu w celu sprawdzenia, regulacji elektrycznej lub mechanicznej bądź naprawy.
- Nie używać urządzenia na zewnątrz.
- W przypadku instalacji tego urządzenia w pomieszczeniu, w którym znajduje się woda, instalacja wodna musi być zgodna z przepisami dotyczącymi zwiększonego ryzyka porażenia prądem elektrycznym.
- Nie należy prowadzić przewodu pod wykładziną. Nie wolno przykrywać przewodu dywanikami, chodnikami itp.
- Urządzenie podłączać wyłącznie do prawidłowo uziemionych gniazdek.
- Nie wolno wkładać ani dopuszczać do przedostawania się ciał obcych do otworów wentylacyjnych lub wylotowych, ponieważ może to spowodować porażenie prądem elektrycznym, pożar lub uszkodzenie urządzenia.


WAŻNE INFORMACJE DOTYCZĄCE BEZPIECZEŃSTWA

- Hałas wytwarzany przez urządzenie elektryczne jest zjawiskiem normalnym, zwłaszcza gdy jest ono zainstalowane w cichym pomieszczeniu.
- Aby zapobiec ewentualnemu pożarowi, nie należy w żaden sposób blokować wlotów ani wylotów powietrza. Nie używać na miękkich powierzchniach, takich jak dywan, gdzie otwory mogą zostać zablokowane.
- Urządzenia należy zawsze podłączać bezpośrednio do gniazdka ściennego. Nigdy nie używaj przedłużacza.
- Urządzenia te zostały przetestowane i zaprojektowane do użytku wyłącznie z opcjonalnymi akcesoriami wymienionymi w niniejszej instrukcji. Korzystanie z opcjonalnych akcesoriów, które nie zostały specjalnie przetestowane dla tego urządzenia, może spowodować utratę gwarancji i/lub zagrożenie bezpieczeństwa.
- Nie przykrywać urządzenia.

Dla urządzeń wyposażonych w grzałkę:

- Przed przystąpieniem do serwisowania należy wyłączyć zasilanie urządzenia i pozostawić je do ostygnięcia. Aby odłączyć zasilanie urządzenia, należy wyłączyć elementy sterujące, a następnie wyjąć wtyczkę z gniazdka.
- Małe dzieci powinny być nadzorowane, gdy znajdują się w tym samym pomieszczeniu co urządzenie. Mogą one być podatne na przypadkowe oparzenia. Jeśli w domu znajdują się osoby z grupy ryzyka, zaleca się zastosowanie bariery fizycznej. Aby ograniczyć dostęp do urządzenia, zainstaluj regulowaną bramkę zabezpieczającą, która utrzyma małe dzieci i inne osoby z grupy ryzyka poza pomieszczeniem i z dala od gorących powierzchni.
- Na urządzeniu ani w jego pobliżu nie należy umieszczać odzieży ani innych łatwopalnych materiałów.
- Ze względu na wysokie temperatury, urządzenie powinno być umieszczone z dala od mebli i zasłon.
- Upewnij się, że zastosowałeś/(aś) odpowiednie środki bezpieczeństwa, aby chronić niemowlęta/dzieci przed dotykiem gorących powierzchni.
- Nawet po wyłączeniu urządzenia szkło i/lub ekran pozostaną gorące przez dłuższy czas.
- Aby uzyskać informacje na temat ekranów bezpieczeństwa i osłon paleniska chroniących dzieci przed gorącymi powierzchniami należy skontaktować się z lokalnym sprzedawcą specjalistycznych palenisk. Ekran i osłony muszą być przymocowane do podłogi.
- Podczas budowania kominka lub półek nad urządzeniem należy zachować odstępów od materiałów palnych.
- Podwyższona temperatura na ścianie lub w powietrzu nad urządzeniem może spowodować stopienie, odbarwienie lub uszkodzenie dekoracji, telewizora lub innych elementów elektronicznych.

Rysunki wymiarowe

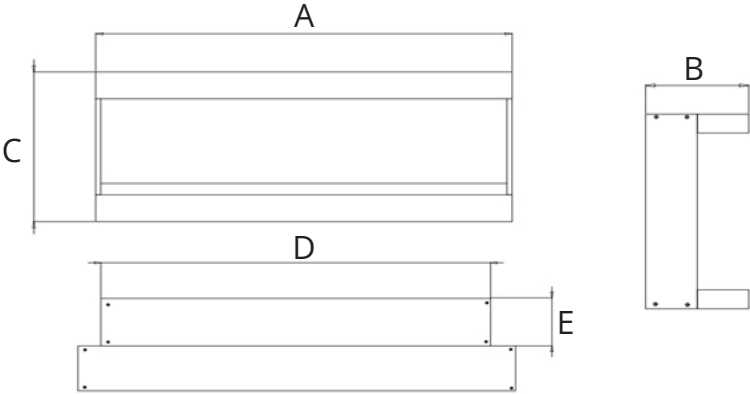

Model	TF- EF-1324-36	TF- EF-1324-50	TF- EF-1324-72
Długość kominka (A)	914mm	1218mm	1826mm
Wysokość kominka (C)	380mm	380mm	380mm
Głębokość kominka (B)	245mm	245mm	245mm

Wymiary ramy

Model	TF- EF-1324-36	TF- EF-1324-50	TF- EF-1324-72
Długość (D)	855mm	1160mm	1765mm
Głębokość (E)	125mm	125mm	125mm

Parametry elektryczne

Model	Napięcie	Moc	Natężenie prądu
Wszystkie	220-240V 50-60HZ	900W/ 1800W	16 A


Wymagane narzędzia

- Śrubokręt krzyżakowy
- Poziomica
- Taśma miernicza
- Wiertarka elektryczna

Rozpakowanie i konfiguracja

Wyjmij wszystkie części i kominek z kartonu i umieść je na czystej, miękkiej i suchej powierzchni. Sprawdź listę elementów, aby upewnić się, że nie brakuje żadnej części. Jeśli brakuje części, skontaktuj się ze sprzedawcą w celu uzyskania części zamiennych.

ZAWARTOŚĆ OPAKOWANIA

		
1 Kominek	Imitacja drewna	8 x Metalowe śruby 4*10 mm
		
1 x Pilot	4 x Kątowniki	4 x Śruby samogwintujące 4*35mm
		
4 x Kołki rozporowe 8*40mm		


Pomocne porady przed montażem

- Należy zachować wszystkie opakowania do momentu sprawdzenia i policzenia wszystkich części oraz zawartości opakowania sprzętu zgodnie z listą części.
- Zestaw zawiera małe elementy, które powinny być trzymane z dala od małych dzieci.
- Zalecamy otwarcie opakowania ze sprzętem i umieszczenie całej zawartości w pojemniku, co zmniejszy ryzyko utraty drobnych elementów.

Instalacja


1. Montaż we wnęce

Krok 1. Zgodnie z informacjami w tabeli, przygotuj odpowiedni rozmiar otworu w ścianie (na zdjęciu).

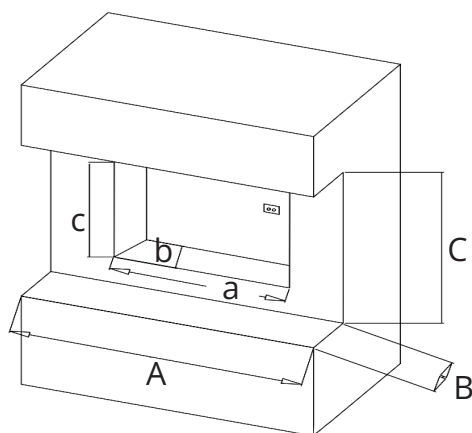


Model	TF- EF-1324-36	TF- EF-1324-50	TF- EF-1324-72
Rozmiar A	914mm	1218mm	1826mm
Rozmiar B	120mm	120mm	120mm
Rozmiar C	395mm	395mm	395mm
Rozmiar a	875mm	1180mm	1785mm
Rozmiar b	145mm	145mm	145mm
Rozmiar c	395mm	395mm	395mm

Krok 2. Przymocuj wspornik mocujący znajdujący się w torbie z akcesoriami do dolnej części kominka za pomocą 4 śrub 4*10 mm (zdjęcie 1).

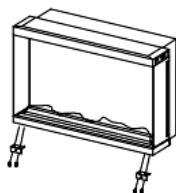

zdjęcie 1

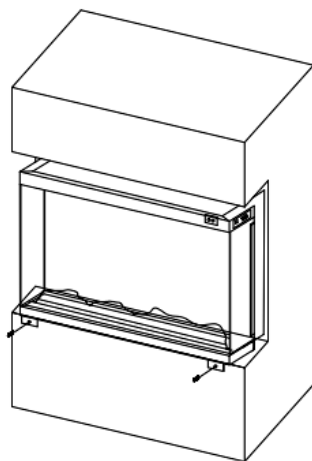


zdjęcie 2

Krok 3. Zainstaluj kominek w otworze i zabezpiecz go za pomocą dwóch śrub 4*35 mm i kołka rozporowego 8*40 mm (zdjęcie 2).


2. Montaż kominka na ścianie

Krok 1. Zgodnie z informacjami w tabeli, dobierz rozmiar odpowiedniego modelu.

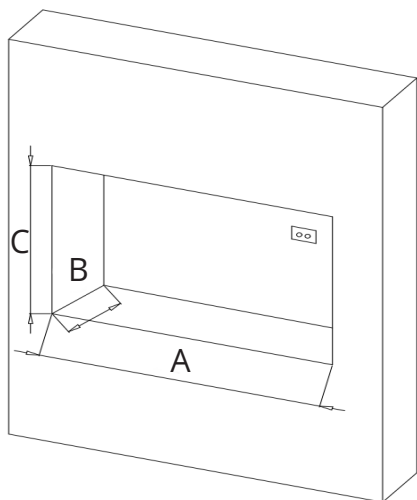


	TF- 1324- 36	TF- 1324- 50	TF- 1324- 72
(A)	875mm	1180mm	1785mm
(B)	160mm	160mm	160mm
(C)	390mm	390mm	390mm

Krok 2. Zamontuj wsporniki mocujące znajdujące się w zestawie akcesoriów po obu stronach kominka za pomocą śrub 4*10MM (zdjęcie 3).

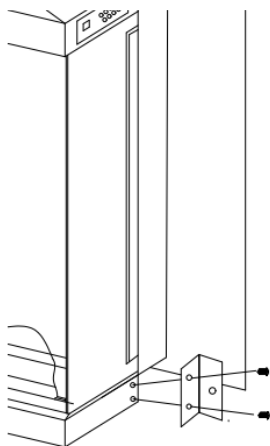


zdjęcie 3

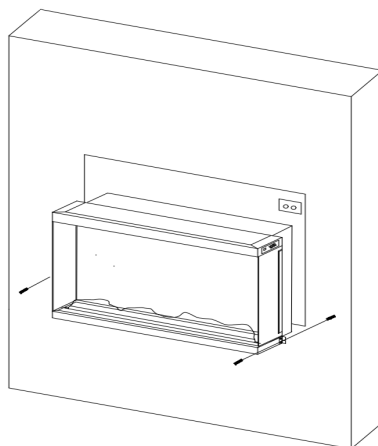


zdjęcie 4

Krok 3. Umieść kominek na ścianie i zabezpiecz go za pomocą śrub 4*35MM i kołków rozporowych 8*40mm (zdjęcie 4).

Obsługa panelu sterowania pilota zdalnego sterowania

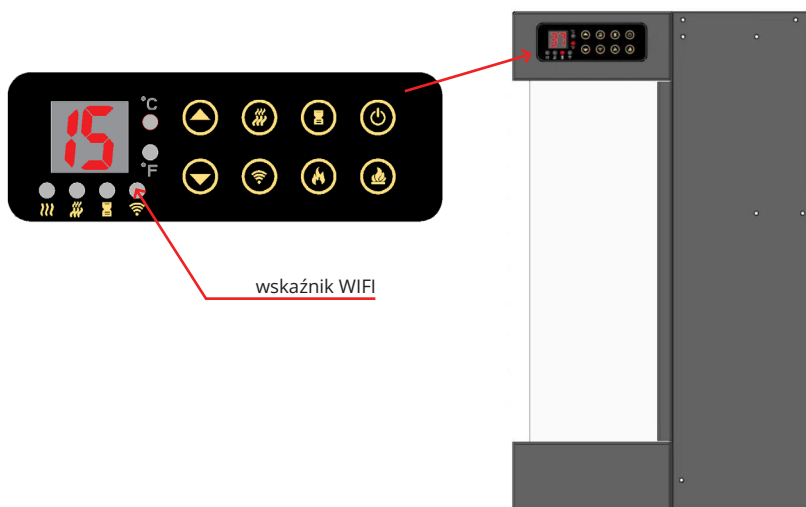

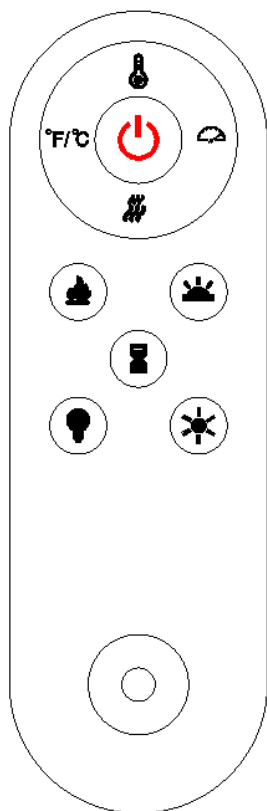

	WŁ.	Włącza i wyłącza urządzenie.
	Kolor płomienia	Steruje zmianą koloru płomienia. 6 kolorów: (F0-F1-F2-F3-F4-F5-F6-F7-F8-F9) F0 włącza pętlę kolorów
	Jasność płomienia	Kontroluje jasność płomienia. 5 ustawień: (L5-L4-L3-L2-L1) Płomień przyciemnia się od L5 do L1. L5 to najjaśniejsze ustawienie (w trybie płomienia F0 jasność światła jest domyślnie maksymalna).
	Kolor podłoża	Kontroluje zmianę podłoża Ember Bed. 9 kolorów: (C0-C1-C2-C3-C4-C5-C6-C7) C0 włącza pętlę kolorów
	Moc grzewcza	Steruje grzałką. Naciśnij przycisk, aby uruchomić nagrzewnicę. (OF): brak grzałki lub dmuchawy. (LO): nagrzewnica wydymkuje ciepłe powietrze 900W) (HI): grzejnik wydymkuje gorące powietrze (1800 W). Gdy ustawiona temperatura jest niższa niż temperatura pokojowa, przewód grzewczy nie jest otwierany.
	Timer	Steruje zegarem. 24 Ustawienia: (1h-24h) Naciśnij przycisk aż do osiągnięciażądanego ustawienia.
	Ustawienie temperatury	Kontroluje temperaturę. 15°C(59°F)–35°C(95°F).
	Jasność podłoża Ember Bed	Kontroluje jasność Ember Bed. 5 ustawień:(-5,-4,-3,-2,-1) Płomień przyciemnia się od -5 do -1. -5 to najjaśniejsze ustawienie (w trybie Carbon Bed C0 jasność światła jest domyślnie najjaśniejsza).
	Prędkość płomienia	Steruje prędkością płomienia.
	Reset WIFI	Naciśnij i przytrzymaj przez 3 sekundy, aby zresetować WIFI

Połączenie przez WIFI

1. Użyj telefonu, aby zeskanować kod QR lub wyszukaj „Tuya Smart” w Google Play lub w AppStore, aby pobrać i zainstalować aplikację.

2. Wybierz kod kraju, wprowadź numer telefonu komórkowego i dotknij „Pobierz”, aby otrzymać wiadomość zawierającą kod weryfikacyjny.



3. Wprowadź kod weryfikacyjny z wiadomości i dotknij „Zaloguj się”, aby zalogować się do aplikacji.


4. Włącz kominek i upewnij się, że znajduje się on w otoczeniu objętym zasięgiem sieci WIFI. Kontrolka WIFI zacznie szybko migać. Jeśli wskaźnik nie miga szybko, naciśnij przycisk „” przez 5 sekund, a następnie przejdź do aplikacji. Stuknij „dodaj urządzenie” u dołu (zdjęcie 1).

A) Wybierz „Heater” (zdjęcie 2)


B) Naciśnij przycisk „Potwierdź szybkie miganie wskaźnika”, gdy wskaźnik na urządzeniu zacznie szybko migać (zdjęcie 3).

C) Wprowadź hasło WIFI, a następnie potwierdź (zdjęcie 4).


D) Poczekaj, aż aplikacja połączy się z urządzeniem (zdjęcie 5).

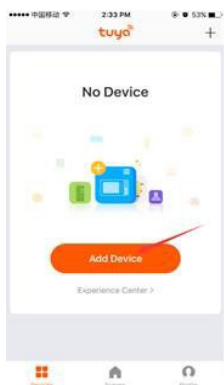

zdjęcie 1

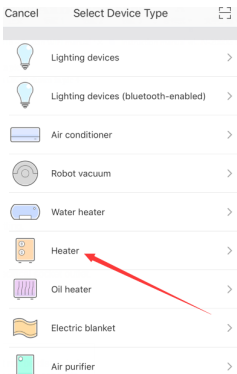

zdjęcie 2

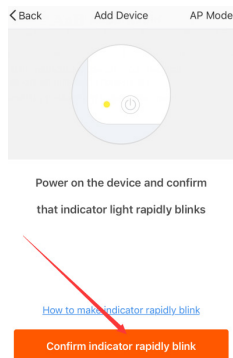

zdjęcie 3


1. Urządzenie można uruchomić także na stronie przez telefon komórkowy znajdujący się w sieci WIFI lub 4G LTE. W tym celu wejdź do głównego interfejsu urządzenia. Znajdują się tam ustawienia zasilania, tryb i timer (zdjęcie 6).

2. Naciśnij przycisk zasilania. Teraz możesz używać grzejnika w aplikacji. Włącz tryb i wybierz odpowiednią temperaturę (zdjęcie 7).


3. Naciśnij timer, możesz wybrać 1 ~ 8 godzin (zdjęcie 8)



zdjęcie 6

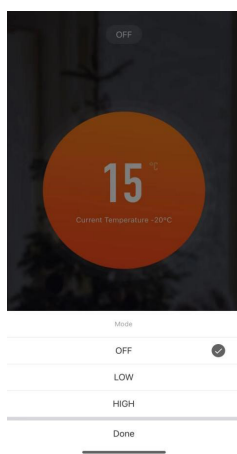

zdjęcie 7

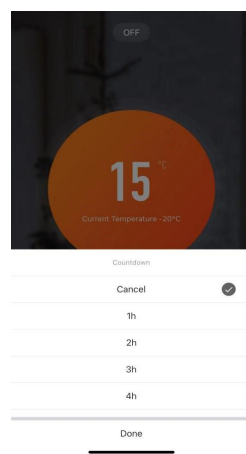

zdjęcie 8


4. Naciśnij przycisk ustawień, aby przejść do opcji (zdjęcie 9):

- Plan tygodniowy
- Regulacja koloru płomienia
- Regulacja koloru węgla drzewnego
- Jasność żaru
- Jasność płomienia
- Regulacja prędkości


5. Wchodząc do programu tygodniowego, można wybrać odpowiednią temperaturę dla 24 godzin w dowolnym dniu tygodnia (zdjęcie 10).

6. Otwórz wybór koloru płomienia, możesz wybrać łącznie 10 kolorów F0 ~ F8 (zdjęcie 11).


7. Otwórz wybór koloru węgla drzewnego, możesz wybrać łącznie 10 kolorów C0~C8 (zdjęcie 12).

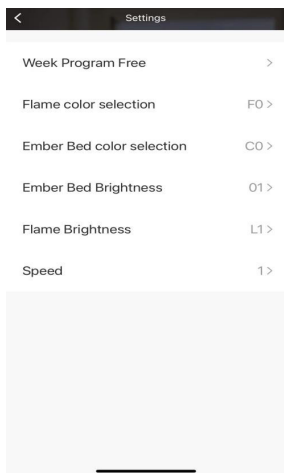


zdjęcie 9

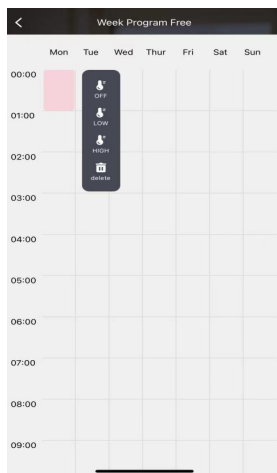

zdjęcie 10

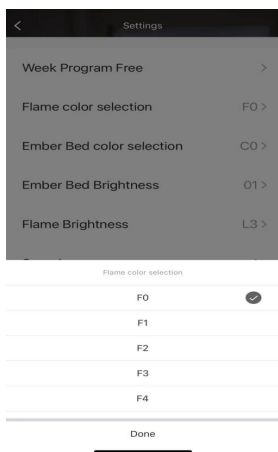

zdjęcie 11

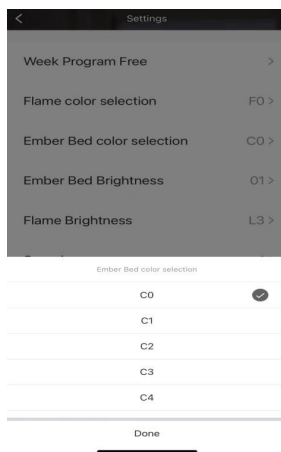

zdjęcie 12

Działanie kominka

Podłącz przewód zasilający do gniazda 220-240 V 16 A. Upewnij się, że gniazdo jest w dobrym stanie, a wtyczka nie jest poluzowana. NIGDY nie przekraczaj maksymalnego natężenia prądu dla obwodu. NIE podłączaj innych urządzeń do tego samego obwodu.

Czyszczenie:

- Przed przystąpieniem do czyszczenia lub konserwacji należy wyłączyć nagrzewnicę i odłączyć ją od gniazdka elektrycznego. Należy odczekać co najmniej 10 minut, aby umożliwić prawidłowe schłodzenie wszystkich podzespołów.
- Używaj odkurzacza lub ściereczki do kurzu, aby utrzymać grzejnik i obszar wentylacji w czystości.
- Zewnętrzną część kominka należy czyścić wilgotną szmatką lub ściereczką do kurzu.
- Nie używaj ściernych środków czyszczących ani płynów w sprayu.

OSTRZEŻENIA

OSTRZEŻENIE

Aby uniknąć porażenia prądem elektrycznym, nie należy otwierać tylnego panelu wkładki, jeśli zasilanie nie zostało wyłączone.

OSTRZEŻENIE

Wszelkie naprawy kominka elektrycznego powinny być wykonywane wyłącznie przez wykwalifikowanego technika.

OSTRZEŻENIE

Wszelkie naprawy instalacji elektrycznej powinny być wykonywane wyłącznie przez wykwalifikowanego technika.

OSTRZEŻENIE

Należy zaprzestać korzystania z kominka elektrycznego, jeśli wystąpiła którakolwiek z poniższych sytuacji:

- Uszkodzenie przez wodę.
- Jeśli wkład został uszkodzony lub wgnieciony.
- Jeśli przewód zasilający został przerwany.
- Jeśli przewód zasilający staje się gorący w dotyku.
- Jeśli urządzenie dymi lub wydziela zapach dymu.

UWAGA:

Gdy funkcje ogrzewania są używane po raz pierwszy, może być wyczuwalny lekki zapach.

Specyfikacja techniczna


- Zasilanie: 220-240V 50-60Hz
- Moc znamionowa: 900W/1800W

Wyłącznik bezpieczeństwa

- To urządzenie jest wyposażone w wyłącznik bezpieczeństwa, który zadziała w przypadku przegrzania (np. z powodu zablokowania otworów wentylacyjnych). Ze względów bezpieczeństwa urządzenie NIE zostanie automatycznie zresetowane.
- Aby zresetować urządzenie, należy odłączyć je od zasilania na co najmniej 15 minut, ponownie podłączyć zasilanie do sieci i włączyć urządzenie.

Rozwiązywanie problemów

Objaw	Rozwiązanie
Brak działania/brak wentylatora.	Sprawdź bezpiecznik.Sprawdź działanie wyłącznika bezpieczeństwa.
Brak oświetlenia z efektem ognia.	Sprawdź diodę LED.

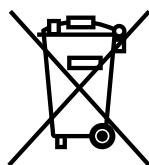

Znaczenie przekreślonego kosza na śmieci na kółkach:

Nie wyrzucaj urządzeń elektrycznych jako niesegregowanych odpadów komunalnych, korzystaj z oddzielnych punktów zbiórki. Skontaktuj się z lokalnymi władzami, aby uzyskać informacje na temat dostępnych systemów zbierania odpadów.

KARTA GWARANCYJNA

MIEJSCE INSTALACJI

DANE INSTALATORA

Nazwa firmy

Imię i Nazwisko

Adres (ulica, nr)

Kod

Miejscowość

NIP

Telefon

Data

Podpis instalatora

Pieczętka instalatora



www.termofol.pl



biuro@termofol.pl




+48 (12) 376 86 00

 **TERMOFOL**



INSTALLATION MANUAL

ELECTRIC HEATER FIREPLACE SERIES TF-EF

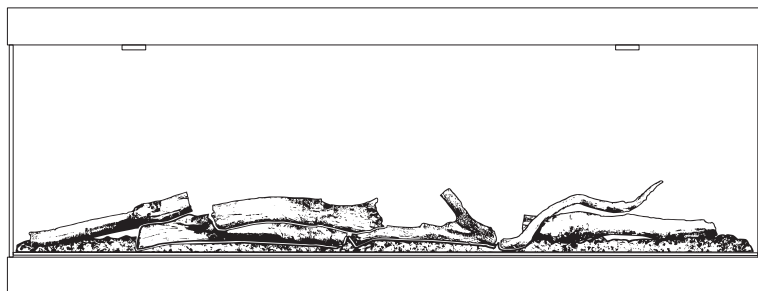

Model: TF-EF-1324-36, TF-EF-1324-50, TF-EF-1324-72



ENG

Installation manual



Note: Please read the instructions before starting the installation!



Read and understand this entire owner's manual, including all safety information, before plugging in or using this product. Failure to do so could result in fire, electric shock, or serious personal injury.



Keep this owner's manual for future reference. If you sell or give this product away, make sure this manual accompanies this product.

Contents

SAFETY INFORMATION.....	19
Dimensions.....	21
Frame dimensions	21
Electrical parameters.....	21
Tools required.....	22
Helpful Advice before Fiting.....	22
HARDWARE PARTS LIST	22
Installation	23
The insert is mounted on the wall.....	24
Kominek montowany ścianie.....	25
Control Panel / Remote Control Operation.....	25
Connection by WIFI.....	27
Operation.....	30
Cleaning.....	30
WARNINGS AND CAUTIONS.....	30
Technical Specification.....	31
Safety Cut-Off.....	31
Troubleshooting.....	31
WARRANTY CARD.....	32

SAFETY INFORMATION

- If equipped with a heater, this appliance can be hot when operated and can cause severe burns if contacted.
- Do not operate appliance before reading and understanding operating instructions. Failure to operate appliance according to operating instructions could cause fire or injury.
- Do not install damaged, incomplete or substitute components.
- Do not burn wood or other materials in this appliance.
- All electric appliances have hot and arcing or sparking parts inside. Do not use it in areas where have gas line, paint or flammable liquids.
- Any safety screen or guard removed for servicing must be replaced prior to operating the appliance.
- It is imperative that the control compartments, circulating blower and its passageway in the appliance are kept clean. The appliance should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required due to excessive lint from carpeting, bedding material, etc. The appliance area must be kept clear and free from combustible materials, gasoline and other flammable vapors and liquids.
- Under no circumstances should this appliance be modified.
- Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system which has been under water.
- If equipped with a glass door, do not operate the appliance with the glass door removed, cracked or broken. Replacement of the glass should be done by a licensed or qualified service person. Do not strike or slam shut the appliance glass door.
- Keep the packaging material out of reach of children and dispose of the material in a safe manner. As with all plastic bags, these are not toys and should be kept away from children and infants.
- Servicing should be done only while the appliance is disconnected from the power supply circuit.
- Always unplug appliance when not in use.
- Do not operate this appliance with a damaged cord or plug after the appliance malfunctions, has been dropped or damaged in any manner. Return appliance to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Do not use outdoors.
- When installing this appliance in a room where water is present, the installation must comply with codes recognizing the increased hazard of electrical shock and electrocution.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
- Connect to properly grounded outlets only.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the appliance.

SAFETY INFORMATION

- It is normal for your electric appliance to produce noise, especially when installed in a quiet space such.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a carpet, where openings may become blocked.
- Always plug appliances directly into a wall outlet/receptacle. Never use an extension cord or relocatable power tap (outlet/power strip).
- These appliances are tested and listed for use only with the optional accessories listed in these instructions. Use of optional accessories not specifically tested for this appliance could void the warranty and/or result in a safety hazard.
- Do not cover. In order to avoid overheating.

For appliances equipped with a heater:


- Risk of burns. Power to the appliance should be turned off and the appliance allowed to cool before servicing. To disconnect power to the appliance, turn controls to off, then remove plug from outlet.
- Young children should be carefully supervised when they are in the same room as the appliance.

Toddlers, young children and others may be susceptible to accidental contact burns. A physical barrier is recommended if there are at risk individuals in the house. To restrict access to an appliance or stove, install an adjustable safety gate to keep toddlers, young children and other at risk individuals out of the room and away from hot surfaces.

- Clothing or other flammable material should not be placed on or near the appliance.
- Due to high temperatures, the appliance should be located out of traffic and away from furniture and draperies.
- Ensure you have incorporated adequate safety measure to protect infants/toddlers from touching hot surfaces.
- Even after the appliance is off, the glass and/or screen will remain hot for an extended period of time.
- Check with your local hearth specialty dealer for safety screens and hearth guards to protect children from hot surfaces. These screens and guards must be fastened to the floor.
- Ensure clearances to combustibles are maintained when building a mantel or shelves above the appliance.

Elevated temperatures on the wall or in the air above the appliance can cause melting, discolor or damage to decorations, a TV or other electronic components.

Dimensions

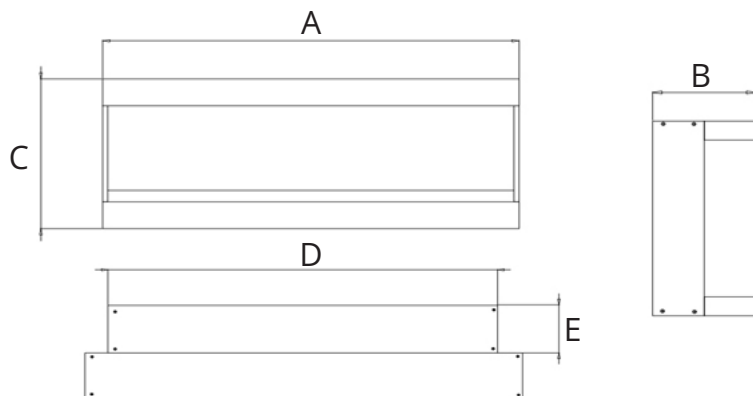

Model	TF- EF-1324-36	TF- EF-1324-50	TF- EF-1324-72
Width (A)	914mm	1218mm	1826mm
Height (C)	380mm	380mm	380mm
Width (B)	245mm	245mm	245mm

Frame dimensions

Model	TF- EF-1324-36	TF- EF-1324-50	TF- EF-1324-72
Length (D)	855mm	1160mm	1765mm
Szerokość (E)	125mm	125mm	125mm

Electrical parameters

Model	Voltage	Rated power	Current
All	220-240V 50-60HZ	900W/ 1800W	16 A

Tools required

- Cross screwdriver
- Spirit level
- Tape measure
- Electric drill

Helpful Advice before Fitting

Please retain all packaging until you have checked and counted all the parts and the contents of the hardware pack against the parts list. The hardware pack contains small items which should be kept away from young children. We suggest that you open the hardware pack and place all the contents into a container, therefore reducing the risk of losing any small pieces.

HARDWARE PARTS LIST

		
1 Heater	Log	8x 4*10mm Metal Screws
		
1 x Pilot	4x Fixed bottom bracket	4x 4*10mm Metal Screws
		
4x 8*40mm plastic expansion tube		


Helpful Advice before Fitting

Please retain all packaging until you have checked and counted all the parts and the contents of the hardware pack against the parts list. The hardware pack contains small items which should be kept away from young children. We suggest that you open the hardware pack and place all the contents into a container, therefore reducing the risk of losing any small pieces.

Installation


1. Embedded in the simulation chimney

Step 1. According to the information in the table, reserve the corresponding size of the chimney and reserve the socket at the top right of the hole.(picture)

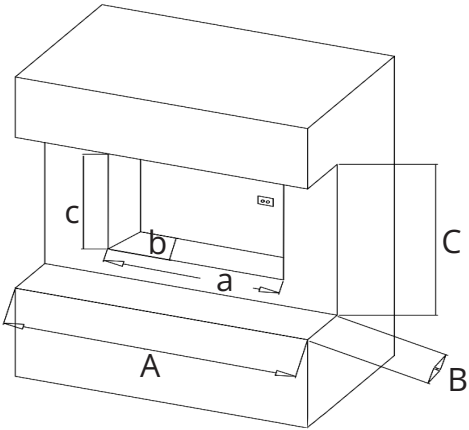


Model	TF- EF-1324-36	TF- EF-1324-50	TF- EF-1324-72
Size A	914mm	1218mm	1826mm
Size B	120mm	120mm	120mm
Size C	395mm	395mm	395mm
Size a	875mm	1180mm	1785mm
Size b	145mm	145mm	145mm
Size c	395mm	395mm	395mm

Step 2. Fix the fixing bracket in the accessory bag to the bottom of the product with 4 screws of 4*10mm (picture 1).

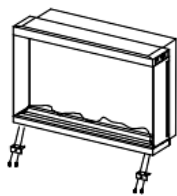

picture 1

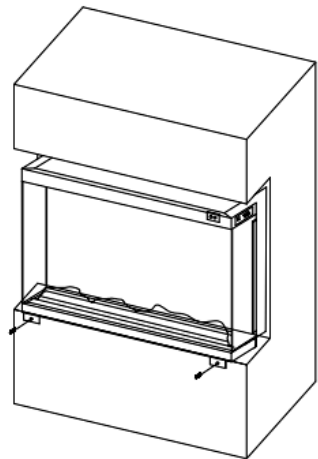


picture 2

Step 3. Install the fireplace in the chimney and secure it with two 4*35mm screws and an 8*40mm expansion tube (picture 2).


2. The insert is mounted on the wall

Step 1. According to the information in the table, reserve the size of the corresponding model on the wall, and reserve the socket in the upper right corner.

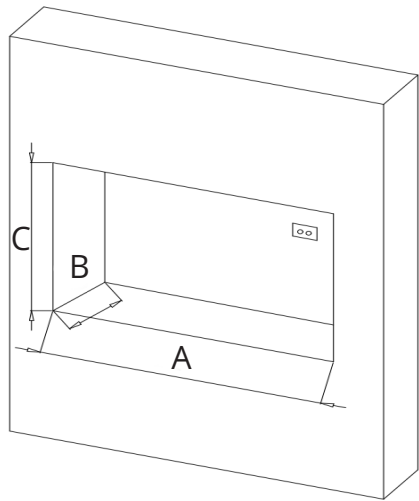


	TF-1324-36	TF-1324-50	TF-1324-72
(A)	875mm	1180mm	1785mm
(B)	160mm	160mm	160mm
(C)	390mm	390mm	390mm

Step 2. Install the fixing brackets in the accessory package on both sides of the fireplace with 4*10MM screws (pictured 3).

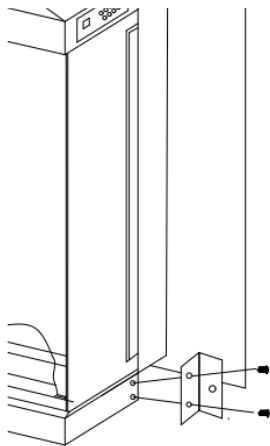


picture 3

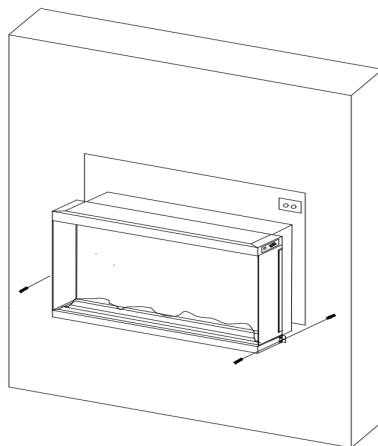


picture 4

Step 3. Place the fireplace inside the wall and secure it with 4*35MM screws and 8*40mm expansion tubes (picture 4)

Control Panel / Remote Control Operation

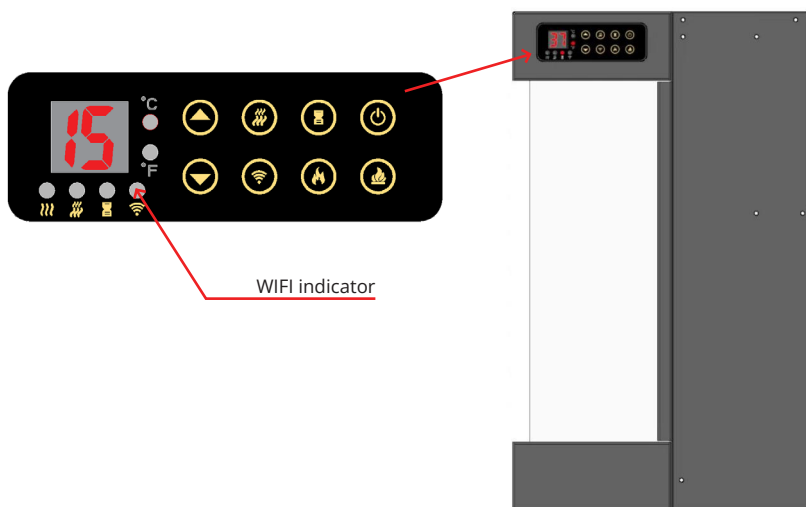

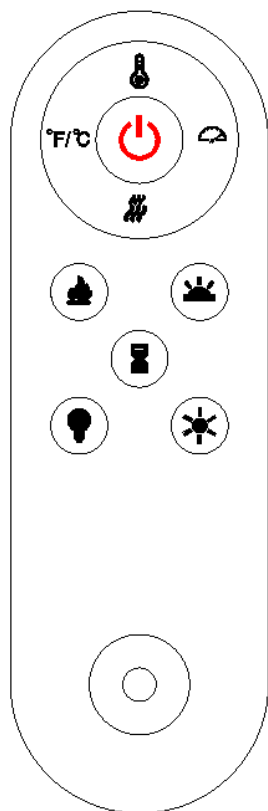

	ON/OFF	Turns appliance on and off.
	Flame Colour	Controls Log Flame change. 6 colors: (F0-F1-F2-F3-F4-F5-F6-F7-F8-F9) F0 is the color loop file
	Flame brightness	Controls Flame brightness. 5 Settings:(L5-L4-L3-L2-L1) Flame dims from L5 to L1. L5 is the brightest setting(In Flame mode F0, the light brightness is maximum by default.)
	Ember Bed Colour	Controls Ember Bed change. 9colors: (C0-C1-C2-C3-C4-C5-C6-C7) C0 is the color loop file
	Heating power	Controls the Heater. Press button to initiate the heater. (OF): no heater or blower. (LO): heater blows warm air 900W) (HI):heater blows hot air (1800W) When the setting temperature is less than room temperature, the heating wire is not opened.
	Timer	Controls the Timer. 24 Settings:(1h-24h) Press button until reach desired setting.
	Temperature Set	Controls the Temperature. 15°C(59° F)~35°C(95° F).
	Ember Bed Brightness	Controls Ember Bed brightness. 5 Settings:(-5,-4,-3,-2,-1) Flame dims from -5 to -1. -5 is the brightest setting(In carbon bed mode C0, the light brightness is the brightest by default.
	Flame Speed	Controls Flame Speed. 4 Settings:(1-2-3-4) Flame Speed
	WIFI Reset	Press and hold for 3 seconds to reset WIFI

WARNING:

Do not move or remove the mesh trim panel, when the appliance is plugged in and operating. This will cause the remote control and touch panel to no longer function.

Connection by WIFI

1. Use your phone to scan the QR code below or search "Tuya Smart" in Application on market to download and install the App.

2. Select your country code, enter the cellphone number and tap "Get" to get a message containing verification on code.



3. Enter the verification on code in the message and tap "Login" to login the App.

4. Switch on the product and make sure the product is in WIFI covered environment. The WIFI indicator light will rapidly blinks.


If the indicator light do no rapidly blinks, please press "  button for 5 seconds, then go to the App, tap "add device" at the bottom, as shown in the picture 1.

A) Choose "Heater",as shown in pic 2


B) Press the "confirm indicator rapidly blinks" when the indicating light on device rapidly blinks,as shown in pic 3

C) Input password of WIFI and then confirm,as shown in pic 4


D) Wait for the APP to connect with the device until it is connected succesfully as shown in pic 5

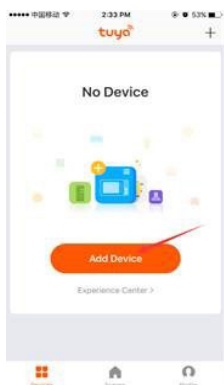

picture 1

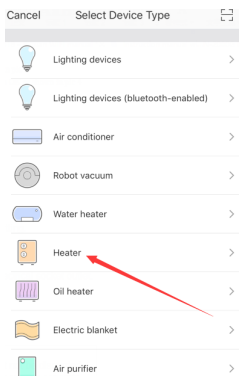

picture 2

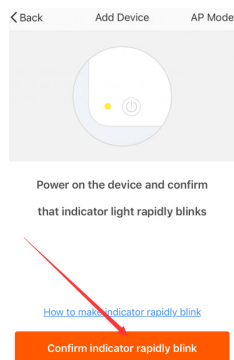


picture 3


1. You can operate the device by mobile under WIFI or 4G LTE environment, Enter the main interface of the device and you will see the power supply, mode, timer and Settings as shown in the picture 6,
2. Press the power button, and you can use your heater on the APP. Turn on the mode, and you can choose the right temperature ,as shown in pic 7.
3. Press the timer, you can choose in 1~8 hours, as shown in pic 8.



picture 6

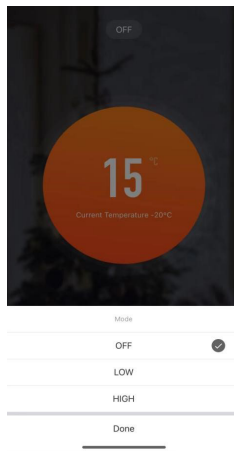


picture 7

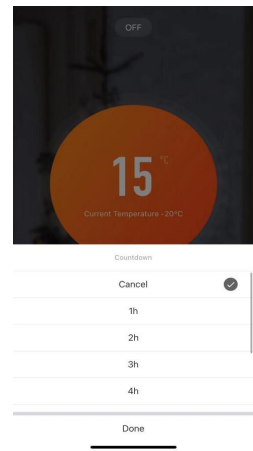


picture 8


4. Press the setting button to enter (as shown in pic 9.)
 - Weekly plan
 - Flame Color Adjustment
 - Charcoal color Adjustment
 - Ember Bed Brightness
 - Flame brightness and Speed adjustment
5. Entering the Week Program, you can choose the appropriate temperature for 24 hours in any day of the Week, as shown in pic 10.
6. Open the flame color selection, you can choose a total of 10 colors F0~F8 (picture 11)
7. Open the charcoal color selection, you can choose a total of 10 colors C0~C8. (picture 12)

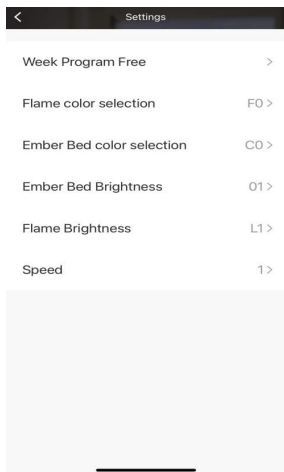


picture 9

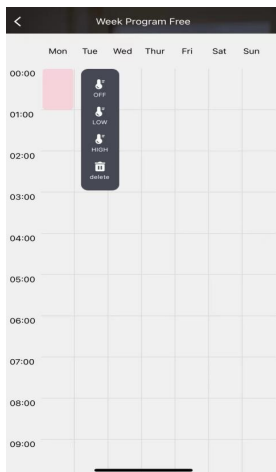

picture 10

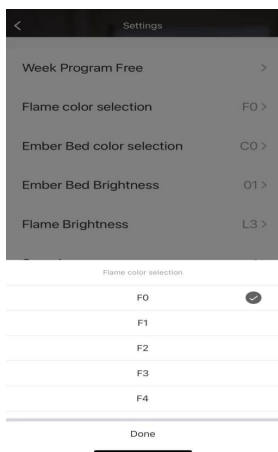

picture 11

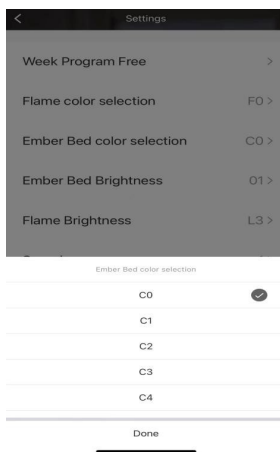

picture 12

Operation

Plug the power cord into a 220-240 Volt 15 Amp outlet. Make sure the outlet is in good condition and that the plug is not loose. NEVER exceed the maximum amperage for the circuit. DO NOT plug other appliances into the same circuit.

Cleaning:

- Turn heater OFF and unplug from electrical outlet before any cleaning or maintenance is performed. Wait at least 10 minutes to allow all components to cool properly.
- Use a vacuum or duster to keep heater and vent area clean from dust and dirt.
- The exterior of the fireplace should be cleaned with a damp cloth or duster.
- Do not use abrasive cleaners or liquid sprays.

WARNINGS AND CAUTIONS

WARNING

To avoid electrical shock not open the back panel of the insert unless the Power has been turned off. And the insert has been unplugged.

WARNING

Any electrical repairs to this electric fireplace. Should only be Performed by a qualified technician.

WARNING

Any electrical wiring repairs should only be performed by a qualified Technician. And also must comply with local buildings codes.

WARNING

Discontinue use of this electric fireplace if any of the follow has Occurred:

- Water damage.
- If insert has been or dented.
- If power cord has become broken.
- If power cord becomes hot to touch.
- If unit smokes or smells like smoke.

NOTE

When the heat functions is used for the first time. A slight odor may be Present. This is normal and should be occur again unless heater is not used For extended periods of time and dust is allowed to accumulate on heater Element.

Technical Specification


- Supply: 220-240V 50-60Hz
- Rated power:900W/1800W

Safety Cut-Off

- This appliance is fitted with a safety cut-off which will operate if the fire overheats (e.g. due to blocked air vents) .For safety reasons, the fire will NOT automatically reset.
- To reset the appliance, disconnect the appliance from the mains supply for at least 15 minutes. Reconnect the supply to the mains and switch on the appliance.

Troubleshooting

Symptom	Solution
No operation/no fan,	Check fuse by replacement. Check for safety cut-off operation,
No fire effect light,	Check the LED light with technician.

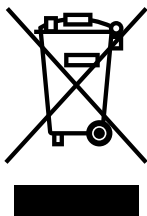

The meaning of the crossed-out wheelie dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact you local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.

WARRANTY CARD

PLACE OF INSTALLATION

FITTER'S DETAILS

Name of
company

Forename
and surname

Address
(street, no.)

Postal
code

Locality

NIP

Tel.

Date

Fitter's signature

Fitter's stamp



www.termofol.com



biuro@termofol.pl



+48 (12) 376 86 00

